DEALER SOFTWARE USER MANUAL

Please take the time to review the user manual prior to operating the system. Our company aim to provide an efficient and easy to operate web tracking interface. This user manual contains information you will need to operate the system efficiently and utilise its features. Please stay tuned as we continually provide updates and added features.

From the management and staff of our company, we wish you happy tracking!

1. CONTENT

1. Content	01
2. Tracking page overview	02
2.1. Asset activation	05
3. Dashboard page overview	07
4. CCTV player page overview	08
5. General menu overview	08
5.1. Create alarm notifications	09
5.2. Create / edit sub users	11
5.3. Credit replenishment	12
5.4. Create / edit geofences	13
5.5. Create / edit contacts	15
5.6. Edit your profile info	16
5.7. Support	17
5.8. Service intervals	17
6. Reports overview	19
6.1. Create new report	20
6.2. Create new automated report	22
6.3. Create fringe benefit tax report	24

2. TRACKING PAGE OVERVIEW

On this screen, you can see a list of your assets, display their position on the map in real time, and use additional functions: asset activation, view/edit asset data, create/edit asset groups, view the latest received alarms.



On the left side of the tracking page is a list of your groups and assets.

At the top are:

- General menu,
- Current page title, -
- Asset list display filter, -
- Additional menu.

In the general list, we see the names of groups and assets that belong to the group. To add a **new group**, click on the additional menu.



Asset List

¢

To edit a group, click on the group menu icon.





	\equiv Asset List \diamondsuit :
	Q Enter Name, Stock Number
 In the list of assets you can view this information: The circle in the lower right corner indicates the status of the asset: gray - stopped, green - moved. Signal icons and satellites indicate signal strength: gray - no signal, red - bad signal, green - good signal. A blue shield icon will indicate the service plan for this asset: L - loc8, P - Qprotect, T - track, W - watch. A blank shield means the asset is not activated. 	Perth Group(1 Asset)
 For water assets, there are additional parameters, shore power and bilge pump. Gray - off, green - on. The bell icons indicate the states of Input 1 and Input 2. Gray - off, green - on. Under the name, the current indicators of speed, fuel, voltage and etc. are displayed, depending on the type of device. 	SR Imil S Imil S Activate Seadoo Rental Edit Imil S Imil S Edit SQ Sydney QT 735 Position Imil S Imil S Imil S SQ Imil S Imil S Imil S Imil S Imil S Imil S <td< td=""></td<>
 Assets menu contains the following functions: Activate - setting alarms, Edit - edit asset info, Status - information about your asset, Position - current asset location. 	

Remaining: -17

On the right side of the tracking page is a map.

At the top are:

- Sign out button, -
- Notifications, -
- Navigate between Tracking pages, Dashboard and CCTV player pages.



At the bottom is a widget with general information about the asset.

Note: that in order for the information to be displayed in the widget, you need to click on the desired asset in the left part of the list of assets.

The upper part of the map displays the **types of alarms** and the number of times they have been triggered.

In the upper right of the map there is a map change icon for various displays: ·

- Standart map,
- Satellite map,
- OpenStreet map.

Here you can turn on the grid and sea marks.

The **settings button** shows the created geofences, and **view all** zooms out the map until all asset pins are displayed.

When you click on the asset pin, you will see an auxiliary window showing **status information** and **latest alarms** button.

2.1. ASSET ACTIVATION



If this is an existing user, then enter his email and click the **Submit** button, if it's new, then click the **New customer** button.

	ACTIVATION	
The second	Please, enter client Email address or Login Name. For new customers, please select New Customer tab below. Email / Login Name:	
	SUBMIT NEW CUSTOMER	Not and

Fill out the Registration / Activation form that appears.

Т

	REGISTRATION	
	PURCHASED FROM	
	Dealer Name*	
The second		
1000	PERSONAL	and the second second
and the second second	Account Name*	
	First Name*	
	ACCOUNT	
123	Login Name* Clients Email*	
and the second second	ASSET	
	IMEI (recontised on device)*	
	Registration* Asset Name*	
	Asset Type*	
	■ 35 H ² 0+4 ?	
and the second s	Malak Madali Calasi Nasi	
the second	Make" Model" Coor" Tear"	
and the second	Solution Type (view Solution Types)* Service Plan*	and the second s
	- Select Summer Page	Children and a state of the sta
	Fitment Options Installation Location	and the second second
	Salest Filmer Options	All and a second
	OTHER ASSET DETAILS	
A Start	Initial Mileage (Im) Initial Engine Hours (b)	
a a		
	Notes	
027		
	Has the device been installed and the asset currently has power?	
	🔿 No 🥏 Yes	
and the second se	Characteristics in the land of the second seco	the second se

After that, you and your user will receive an activation **email** with details.

3. DASHBOARD PAGE OVERVIEW

The dashboard page appears when you log into your account, but you can also open it by clicking on the **Dashboard icon**, which is located above the map.



At the top you will find information about:

• **Device inventory** - the number of devices installed, deactivated and stored on the balance. Click on the items for more details.

• **Device status** - number of assets in and outside geofences. Click on the items In lot, Off lot or Total for more details.

• Miscellaneous Reporting - number of reports received.

• **Devices sold** - number of assets sold. Click on the items this week, this month or year to date for more details.

Dashboard ×									
Device Inventory	Device Status	Miscellaneous Reporting	Devices Sold						
Installed 22 Deactivated 0	InLot 0 OffLot 0	Low Battery 3 Non Reporting -1	This Week 0 This Month 2						
In Inventory 0 Eystem Total 22	Total 0	Adjusing Stock Number 22	Vearto Date 128						
Assets bata Show 5. entries	Search	All > Lot Management Map							
Map Aoust Name Stock Number Alex Dar Vanessa -	Voltage(V) Stationary Time Minage 0 V 9b 35m 5 0 V 4d 13h 3m 0	0030000 0030000 0030000 005000	Alama Cycle Pier 🖓						
Jhan Cold - Test car1	0 V 924d Sh 19m 0	-	Studio 6 San Antonio.						
Showing 1 to 5 of 22 entries	refunkti 1 2 3	4 5 NEXT hwest Pkwy Northwest Pkwy	Morets, r.m. Northward Dharr Later						

At the bottom is a **map and table** with the following data: map (Click on the icon to display the corresponding asset on the map to the right of the table), asset name, stock number, voltage, stationary time, total mileage, total engine hours.

To display a separate group of assets, select the name of the group in the upper right corner.

4. CCTV PLAYER PAGE OVERVIEW

To open the CCTV player page, click on the **Camera icon**, which is located above the map.





Above the camera display are buttons for turning **on** and **stopping** the video. Display **1,4,9** or **all** available cameras, as well as a **full-screen** video display option.

5. GENERAL MENU OVERVIEW

To open the General menu, click on the **icon** in the upper left part of the tracking page. \blacksquare Asset List \diamondsuit



On this pop-up you can perform the following functions:

- Assets manage your assets information and other.
- Set alarms manage alarm notification for one or a group of assets (email and app).
- Sub users add, edit, search, and delete your account users.
- **Renewals** view devices up for renewal and make a payment online.
- Geofences create virtual fences for your assets.
- Contact / Driver list add, edit, search, and delete your contacts / drivers.
- Settings editing your profile information.
- **Support** help with any problems or question.
- **Reports** schedule and run reports for selected assets.
- Service intervals create, edit and remove Service Intervals.

5.1. CREATE ALARM NOTIFICATIONS





4. In the list of assets that appears, select the necessary ones by checking them in the	÷	Select Assets 🗢 🗢
checkboxes	Q	Search
or click on the switcher to select all assets.		
Click Next button.	Select	All Assets
	JR	Jetski Rental 💦 🔀
	SR	Seadoo Rental
	SQ	Sydney QT 735
		NEXT
	~	Alarm
5. Choose what type of alarms you want to receive on		
as well as the email from drop-down contact list.	Alarm In this alarms want t	section you can Turn On / Off s for the asset. Set which Alarms you o receive.
	SELEC	T ALL PUSH NOTIFICATION
		SOS Duress
		Power Disconnect
		Enter Geofence
		Leave Geofence
	SELEC	T ALL EMAIL NOTIFICATIO
		Power Disconnect
		Enter Geofence
		Leave Geofence
		Low Battery
	Email	
		Contact > All Bikes
		SAVE

5.2. CREATE / EDIT SUB USERS

A sub users can be created to allow different logins to see different assets, the main account will still have the full function to create, edit and remove these users and view all data from the assets on their own and any sub users. This users is also used when assigning a driver to an asset.



4. In addition to the standard fields when creating / editing a sub-user, the fields Role and Authorise an asset are of key importance.

The role determines what features are accessible by the user when they login. Below is an explanation of the **roles**:

• **View** - can view only live tracking, no playback, no change assets, no reports,

• Driver - same as view only

• **Standard** - can view live, playback, check reports etc, but not change assets,

• Controller - can view live, playback, check reports etc.

Authorize an asset input - specify which assets this sub user has access to.



5.3. CREDIT REPLENISHMENT

- 1. Open **General menu**.
- 2. Select **Renewals** block.



3. **Select** the desired number of credits replenishmenta and click **Buy now** button. You will be taken to PayPal website.



4

Recharge Credits

5.4. CREATE / EDIT GEOFENCES

Geofence – this is an area that is set to provide a log or email notification in the event an asset enters or leaves the location.





5.5. CREATE / EDIT CONTACTS

The contact list is required to send reports and other materials to your colleagues or people who need this information. This list is also used when assigning a driver to an asset.

- 1. Open General menu.
- 2. Select Contact / Driver List block.



Contact / Driver List

4

3. You will open a section with your contacts, where you can **edit** their data, **delete** or **create** a new one.



4. Fill in the fields and click Save to complete..



5.6. EDIT YOUR PROFILE INFO

1. Click General menu icon.

2. Select Settings block.



3. In the Profile tab you can change your contact information.	← Settin	gs
4. In the Password tab you can change your password.	PROFILE	∂ → Password
	Pirst Nam Quiktral	e K
	Last Nam Demos.	e
	E-mail sales@v	quiktrakglobal.com
	Phone Nu 130088	mber 5461
	Address	reall Dood

13a Kingsall Road Country 13a Kingsall Road Time Zone > (UTC+08:00) Perth City / Town Attadale State / Province WA Zip / Postal Code 6156 SAVE

5.7. SUPPORT

If you have problems with your asset, leave a request to our support center and our specialists will contact you shortly.



5.8. SERVICE INTERVALS

These are reminders of such events as: tire change, engine check, renewal of registration and insurance, etc.

- 1. Open **General menu**.
- 2. Select Service Intervals block.



3. You will open a section with your service intervals, where you can **edit** their data, **delete** or **create** a new one.



÷

Service Intervals

4. Fill in the fields and click Save to complete.

÷	New Service Inter	val
	Name	
U	Name	
0	Assets	>
0	Service Type	
0	Engine service	>
	Inclusion	>
	Interval Type	
	Date	>
desk.	Interval Value	
11 ¹	Interval Value	
	Early Warning Value	
	Early Warning Value	
\sim	Notify Email	>
	Remark	
	Remark	
0	Active	
	SAVE	

6. REPORTS OVERVIEW

1. Click General menu icon.

2. Select **Reports** block.





On this **pop-up** you can perform the following reports:

- Devices sold includes devices that have been registered for the end user.
- Lot overview displays assets that have reported inside and outside of the dealership lot Geofences.
- Off lot displays assets that have reported outside of the dealership lot Geofences.
- Drive off all assets that have sold through without registration and GPS device.
- Devices istalled display devices installation in selected period of time.
- Devices deactivated display deactivated devices in selected period of time.

- Alarm report displays triggered alarms for a specified period of time.
- Playback- displays the asset route for the selected time period.
- Servicing overview displays overview for service Intervals that has been setted previously.
- Power disconnect- displays the assets in which the power was disconnected.
- Fringe benefit tax provides a log book fringe benefit tax report.
- Geofence overview displays assets that have reported inside and outside of the geofences.
- Fuel tax credit provides a fuel tax credit report.
- Fleet report provides a fleet report.
- Asset listing asset overview report.
- Low battery displays assets that have a battery level lower than the set threshold.
- Not reporting displays assets which have not reported in within the set timeframe.

The section with **Automated reports** is located in the upper right corner of the popup when you click the **Show scheduled** button.

The principle of creating is the same as simple reports, except that these reports will be sent to the specified email within a specified period of time.

6.1. CREATE NEW REPORT



HOW SCHEDULED

4. Fill in the fields and click Submit to complete.

	÷	Run Report
		Type >
	0	Assets Karratha QT EE 500, Jets >
		Select all by default
	۲	Alerts CUSTOM, Defence, Enter
		Select all by default
	G	Period of Time > 6 Hours
		Display addresses
, ,		SUBMIT

You	will ope	n a tab	le with	data tha	at you o	can save	in Exc e	el, CS	V or PDF fo	ormats. —			
The Print button opens a print window if your PC is connected to a printer.											7		
Get all address button, shows addresses in the Address column. You can also show the address individually by clicking on the Show address line in the Address column.													
Alarm I	Report												×
Show 10	entries								GET ALL ADDRESSES	DXCEL B	Por 👌	257	C PRINT
Мар	Coordinates	Alert Name	Asset Name	IMEI	T Voltage(V)	Date, time	Ignition State	Speed	Hrs/Cent	Address	Make	Model	Color
•	-34,5485, 150,7860	Ignition Off	Sydney OT 735	8000142170222884	0	11/07/2022 02:12:28	On	•		Show Address	Corolla	Corolla	White
•	-34.5485, 150,7860	Ignition On	Sydney QT 735	0000142170222884	0	11/07/2022 10:44:59	0n	0		Show Address	Corolla	Corolla	White
0	-34.5485, 150.7860	Intrusion Alert	Sydney QT 735	0000142170222684	0	11/07/2022 10:45:00	On	0		Show Address	Corolla	Corolla	White
•	-33.8781, 150.9439	Ignition Off	Sydney QT 735	0000142170222884	0	11/07/2022 12:23:48	On	0		Show Address	Corolla	Corolla	White
Showing	to 4 of 4 entries											a 1	HERE

Note, if you change your mind and decide to select a different report type, you don't have to go back to the menu. You can also generate any type of report through the top input report type. When you click on one, a drop-down list will appear.



6.2. CREATE NEW AUTOMATED REPORT

- 1. Open General menu.
- 2. Select **Reports** block.



3. Click on the show scheduled button.



4. You will open a section with your automated reports, where you can **edit** their data, **delete** or **create** a new one.



5. When you click on the Add new button, a popup with report types will open. **Choose** the one you want. –

6. A form will open for you, just like when creating simple reports, except that you need to specify the type of report: daily, weekly or monthly, as well as the email to which it should be sent.
7. Click the Save button, after which this report will

7. Click the **Save** button, after which this report will appear in the list of your automatic reports.





6.3. CREATE FRINGE BENEFIT TAX REPORT

- 1. Open General menu.
- 2. Select **Reports** block.



3. Select **fringe benefit tax** report.



4. Fill in the fields and click **Submit** to complete.



You will see a table with graphs with general data for the selected assets. Click the **Show** button in the desired asset.

Fringe Benefit Tax - 72 Hours									
Total Duration		Total Mileage		То	tal Fuel				
Lat Show 5 entries					10	Search:			
1. Annut Namo	Avg Speed	. Mar Speed	Total Duration	Total Mileage	Total Fuel	Details			
💮 Jetski Rental	18.0 km/h	36.8 km/h	02:20:41	42 km	0 L		🐵 зноw		
💮 Karratha QT EE 500	21.5 km/h	34.4 km/h	01:24:50	31 km	4.03 L		G SHOW		
😁 Sydney OT 735	34.2 km/h	67.4 km/h	04:09:18	231 km	13.86 L		📀 БНОМ		
Showing 1 to 3 of 3 entries								101	

You will see a table with trips data. Check the checkboxes for those trips that were **business** and click the **submit** button. The rest of the trips will be marked as private.

Fringe Benefit Ta	x									
Please, select Business	journeys in the table below	, all other(unchecked) will I	oe marked as Pri	vate.						
								SELECT ALL SELECT NONE	GE	ALL ADDRESSES
Show 10 entries								Search.		
1. Vehicle / Driver	📜 Start Tama	Stop Time	. Ouration	Distance	Start Address	Start Coordinates	Stop Address	Step Gos	dinates	Playback
🗹 🔶 Halai Frental			00.14.59	21-	dim status	2110603, 2136013	These states as	24.1007.0	26628	SHOW
🗹 🛛 Jetski Rontał	99/07/2022 19:09:02	09/07/2022 19:30:20	00:21:18	12 km	Show Address	34.05097,-81.25293	Show Address	34.10593, -8	35609	SHOW
🗋 🛛 Jetski Rental	09/07/2022 17:10:08	00/07/2022 17:55:06	00:44:58	6 km	Show Address	34.04341,-81.23180	Show Address	34.05726, -8	25292	SHOW
🗇 🛛 Jetski Rental	09/07/2022 14:46:45	09/07/2022 15:44:11	00:57:26	22 km	Show Address	34.10594, -81.36621	Show Address	34.043 <mark>23</mark> , -8	23210	SHOW
Showing 1 to 4 of 4 entr	ies 2 rows selected								stinos -	1 1071
						SUBMIT				

You will see the final version of the report with statistics on **business** and **private** trips.

Fringe	Benefit Tax														
0	Vaart Name: Jetski Rental	Make 1	ieadoo									•	Average Speed		18.0 km/h
	registration: n/a	📾 Model	2020									•	Maximum Speed		36.8 km/h
-04	Engine Capacity O cc	(iii) Color a	/a									倒	Total Duration		02:20:41
	ferrod Etari: 09/07/2022 14:46:	45 📾 Veec n	a										Total Mileage		42 km
创	enod End 69/07/2022 21:18:1	4										5	Total Mileane (husine	es/miuatel 1	t km / 28 km
												ED.	Total Code	adjoint of	
												E	Total Fues		DL
												160	Total Fuel (business/)	orivate) 0	00 L / D.00 L
									GET ALL	ADDRESSES	Exce		POF 📑	CSV	PRINT
															_
Show 1	entries									Search			Journey Pu	rpose M	lti Use 🗦
11 Jour	ney Purpose - 🛄 Veticle / Driver	🗼 Start Time	Stop Time	Duration	Start Mileage	Erd Milwage	Distance	Start Address	Start	Coordinates	Biop Address			Step Coordinat	n Nas S
Busin	ess Jetski Rental	09/07/2022 21:01:15	09/07/2022 21:18:14	00.16.59	3006.00 km	3007.00 km	2 km	Show Address	34.10603	9, -81 30613	Show Address		34	10597, -81.366	20 12.1 km/ł
Busin	ess Jetski Rental	09/07/2022 19:09:02	09/07/2022 19:30:20	00/21:18	2993.00 km	3005.00 km	12 km	Show Address	34.05697	7, -81 25293	Show Address		34	10593, -61.366	09 35.8 km/ł
Ptiva	te Jetski Rental	09/07/2022 17:10:08	09/07/2022 17:55:06	00:44:58	2987.00 km	2993.00 km	6 km	Show Address	34.04341	1, -81,23180	Show Address		34	05726, -61.252	92 16 km/h
Ptiva	e Jetski Rental	09/07/2022 14:46:45	09/07/2022 15:44:11	00.57.20	2965.00 km	2987.00 km	22 km	Show Address	34 10594	4, -81 30621	Show Address		34	04323, ·81 232	10 24 km/h
-														t.	